


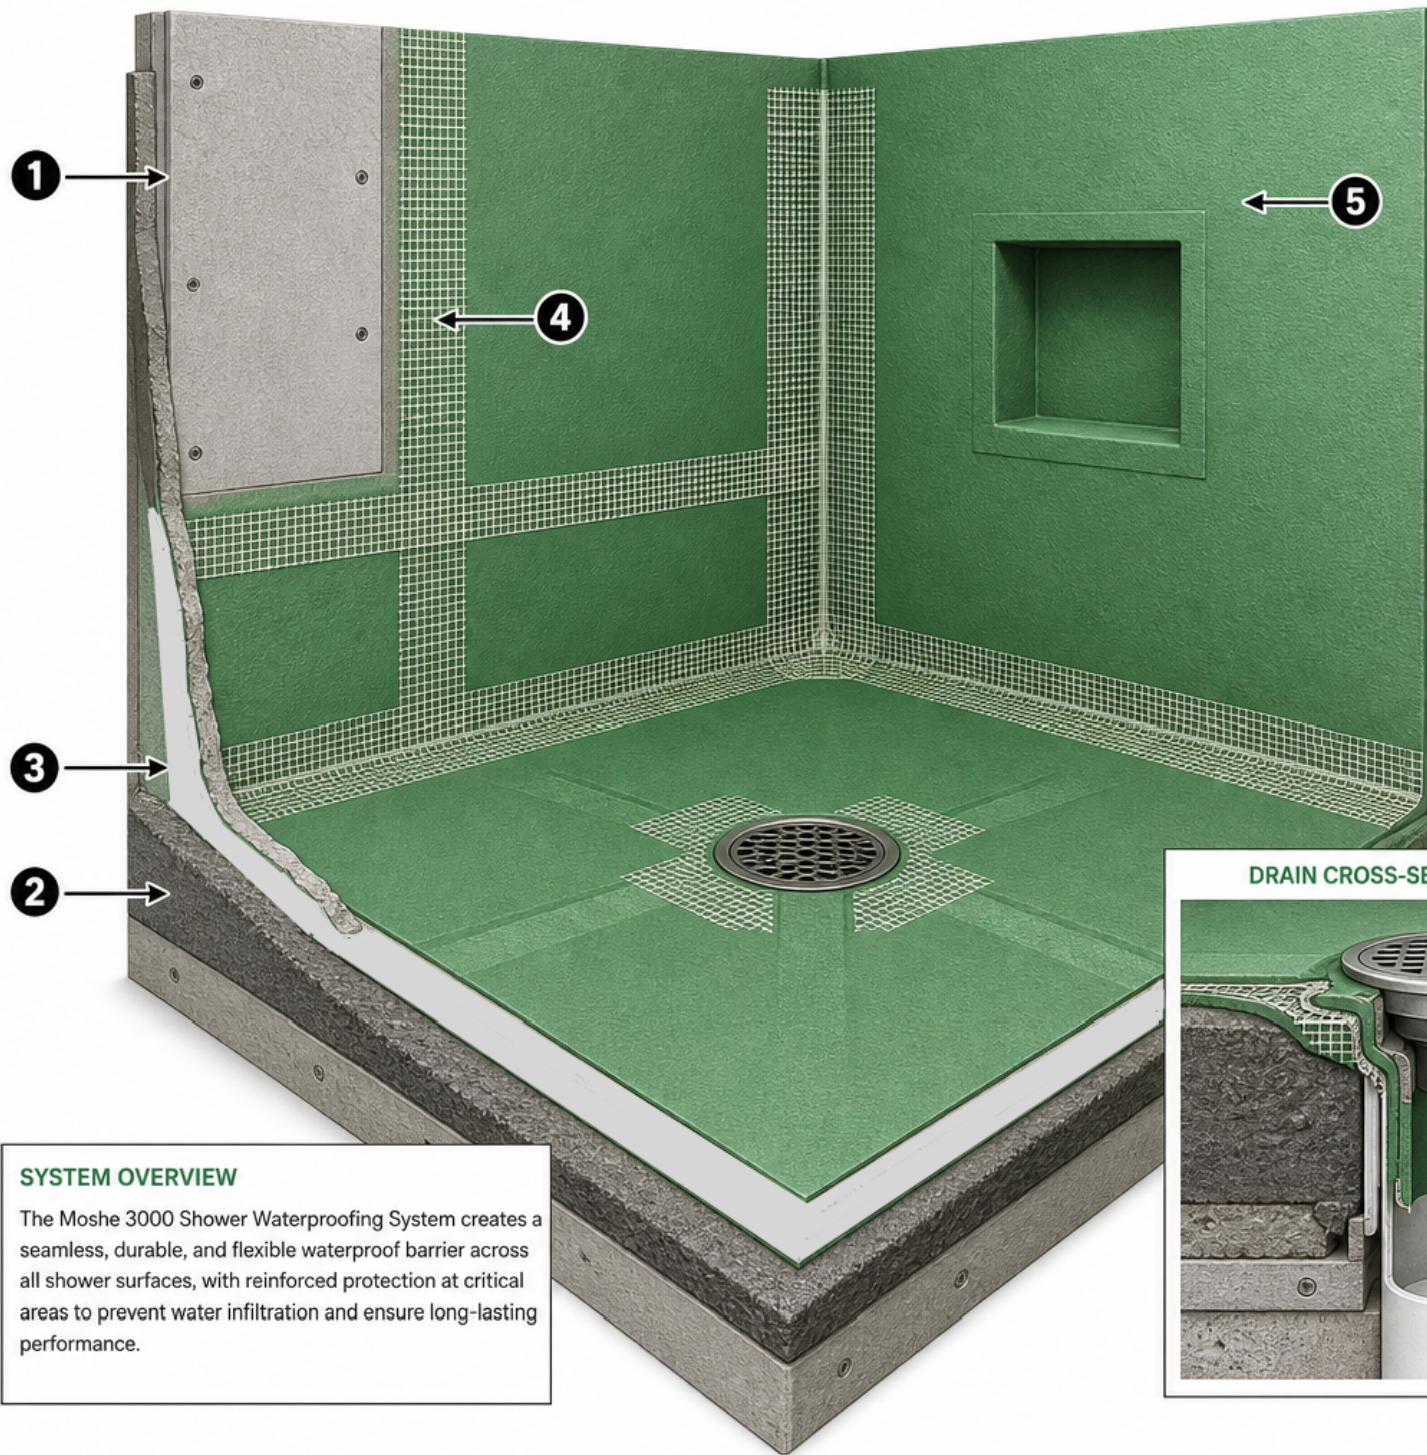

- 1 Cement board**
Provides a stable backer for the shower wall system.
- 2 Mortar bed**
Sloped mortar bed for proper drainage to the floor drain.
- 3 Moshe 3000 Floor & Wall (for unstable substrates)**
A high-performance waterproofing membrane applied over the substrate and beneath the final coat.
- 4 Moshe 3000 Reinforcing Mesh**
Embedded in key areas for added strength and to bridge joints, corners, and the drain.
- 5 Moshe 3000 Flex Green**
The final waterproofing coat applied over all surfaces, including half way into the drain pipe.

SYSTEM OVERVIEW

The Moshe 3000 Shower Waterproofing System creates a seamless, durable, and flexible waterproof barrier across all shower surfaces, with reinforced protection at critical areas to prevent water infiltration and ensure long-lasting performance.

DRAIN CROSS-SECTION (FRONT VIEW)

